

V4RxMx Print-Related TCP Fixes for OS/400 - Current as of 10/10/2002

The following PTFs are general fixes for any printer or output queue using TCP. A current Cumulative PTF Package and the following PTFs should be applied to any system that is using TCP or remote output queues.

	R410	R420	R430	R440	R450
5769999				MF26731 (1000)	MF29064 (1000)
5769TC1	SF55833 (9152)	SF57996 (1000)	SF58153 (0175)	SF64731 (1000)	SF63410 (0294)
5769TC1	SF52880 (9152)	SF52837 (9068)			
5769SS1	SF59017 (1000)	SF61083 (1000)	SF57398 (9243)	SF64657 (1000)	SF67511 (1000)
5769SS1			SF63650 (1000)	SF65484 (1000)	
5769SS1			SF62139 (1000)	SF62135 (1000)	SF63295 (0294)

V4RxMx SNMP print driver Fixes for OS/400 - Current as of 10/10/2002

The following PTFs are general fixes for any LAN-attached printer using the SNMP print driver:

	R410	R420	R430	R440	R450
5769SS1	Unsupported	Unsupported	SF64878 (1000)	SF64610 (1000)	SF66284 (1000)

To configure a *LAN 3812 SNMP device description for an IBM 6400 printer, type **CRTDEVPRT** and press the F4 (Prompt) key. The following is an example of using the Create Device Printer (**CRTDEVPRT**) command to create a *LAN 3812 SNMP device description:

Create Device Desc (Printer) (CRTDEVPRT)

Type choices, press Enter.

```
Device description . . . . . > IBM6400SNMP

Device class . . . . . > *LAN
Device type . . . . . > 3812
Device model . . . . . > 1

LAN attachment . . . . . > *IP

Port number . . . . . > 9100

Online at IPL . . . . . *YES

Font:

  Identifier . . . . . > 11
  Point size . . . . . *NONE

Form feed . . . . . > *CONT
Separator drawer . . . . . *FILE

Separator program . . . . . *NONE
  Library . . . . .

Printer error message . . . . . > *INFO

Message queue . . . . . *CTLD
  Library . . . . .

Activation timer . . . . . 170

Inactivity timer . . . . . > *SEC15
Host print transform . . . . . *YES

Manufacturer type and model . . > *IBM6400

Paper source 1 . . . . . > *MFRTYPMDL
```

```

Paper source 2 . . . . . > *MFRTYPMDL
Envelope source . . . . . > *NONE
ASCII code page 899 support . . *NO

Image configuration . . . . . *NONE
Character identifier:

    Graphic character set . . . . *SYSVAL

    Code page . . . . .

Remote location:

    Name or address . . . . . > '9.5.208.46'

User-defined options . . . . . > *IBMSHRCNN

User-defined object:

    Object . . . . . *NONE

    Library . . . . .

    Object type . . . . .
Data transform program . . . . . *NONE

    Library . . . . .

System driver program . . . . . > *IBMSNMPDRV

Text 'description' . . . . . > '*LAN 3812 SNMP Device Description
for IBM 6400'

```

Once you have created the printer device description, you will need to vary on the printer device description using either the Vary Configuration (**VRFCFG**) or Work with Configuration Status (**WRKCFGSTS**) command and then start the printer writer using either the Start Printer Writer (**STRPRTWTR**) or Work with Writers (**WRKWTR**) command.